


HOW TO SPEED UP YOUR CUTTINGS WITH AN X-STREAM AERO PROPAGATOR

EVERYTHING YOU NEED TO KNOW TO GET RAPIDLY ROOTED CUTTINGS


THE PUMP

- Fit the suction cups to the base of the pump
- Push the plastic and sponge filter onto the end of the pump

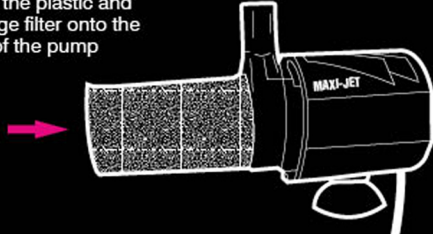


THE RESERVOIR

- Place on a level surface
- Position the pump in the centre of the reservoir
- The pump lead should sit in the groove on the reservoir

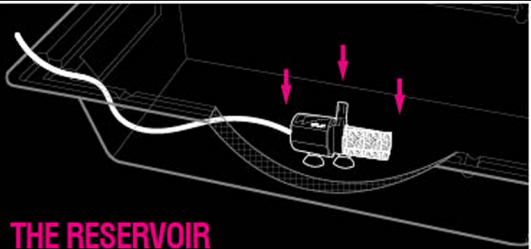


THE SPRAYER

- Attach the 'H' assembly to the pump
- For 120 space, connect the two 'H' assembly pieces to the grey pipe and attach to the pump

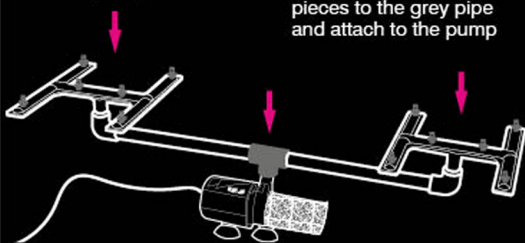


FILLING THE RESERVOIR

- Fill the water to just below the 'H' assembly
- Use lukewarm or cold water
- Test by plugging the pump in
- If using cold water allow time to reach room temperature
- Place the support tray into position

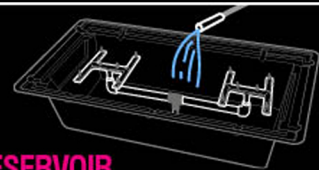


PLANTING OUT

- Slide cutting into the slit in the sponge disc. At least 2cm of stem should show below the disc
- Place discs into the support tray

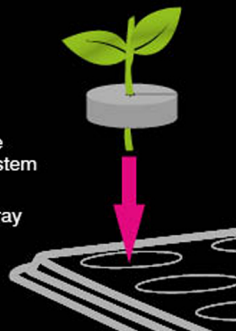

THE LID

Put the propagator lid in place.

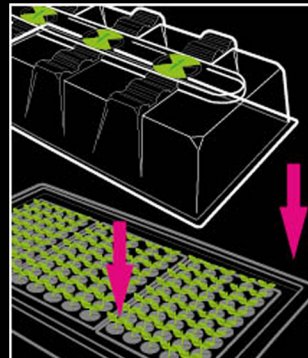

THE SPRAYER

Switch on and run continuously.




TOPPING UP THE TANK

When roots are visible, top up the tank as necessary with water and if desired, nutrients.



TRANSPLANTING

When cuttings have developed healthy roots transplant to your preferred grow system.

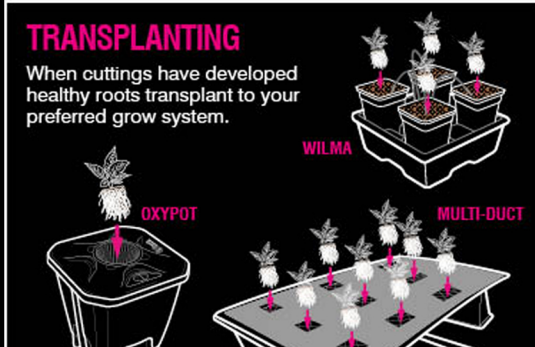

ENJOY
RAPIDLY
ROOTED
CUTTINGS

